


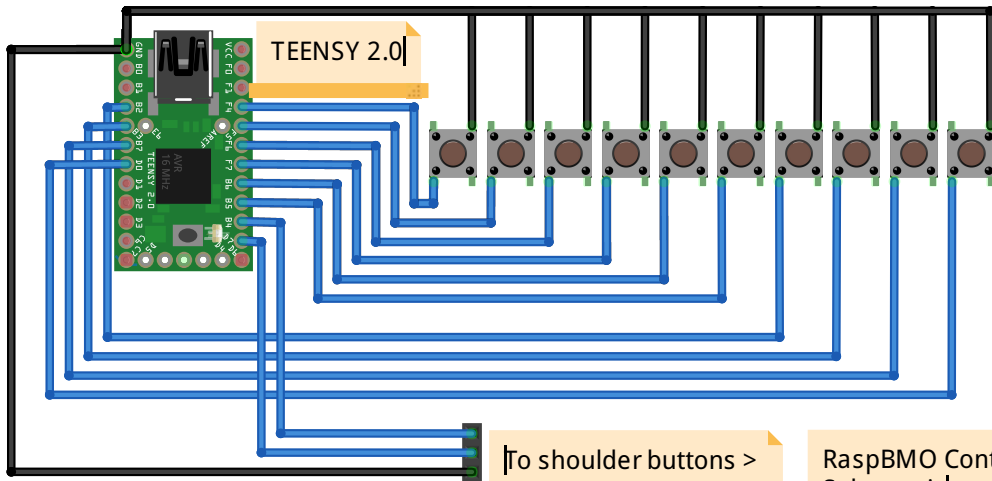

TEENSY 2.0

Teensy Wiring
F4=Up
F5=Down
F6=Left
F7=Right
B6=Start
B5=Select
B4=Left Bumper
D7=Right Bumper
B2=A
B3=B
B7=X
D0=Y

To shoulder buttons >

RaspBMO Controller
Schematic