


RASPBMO CONTROLLER ASSEMBLY

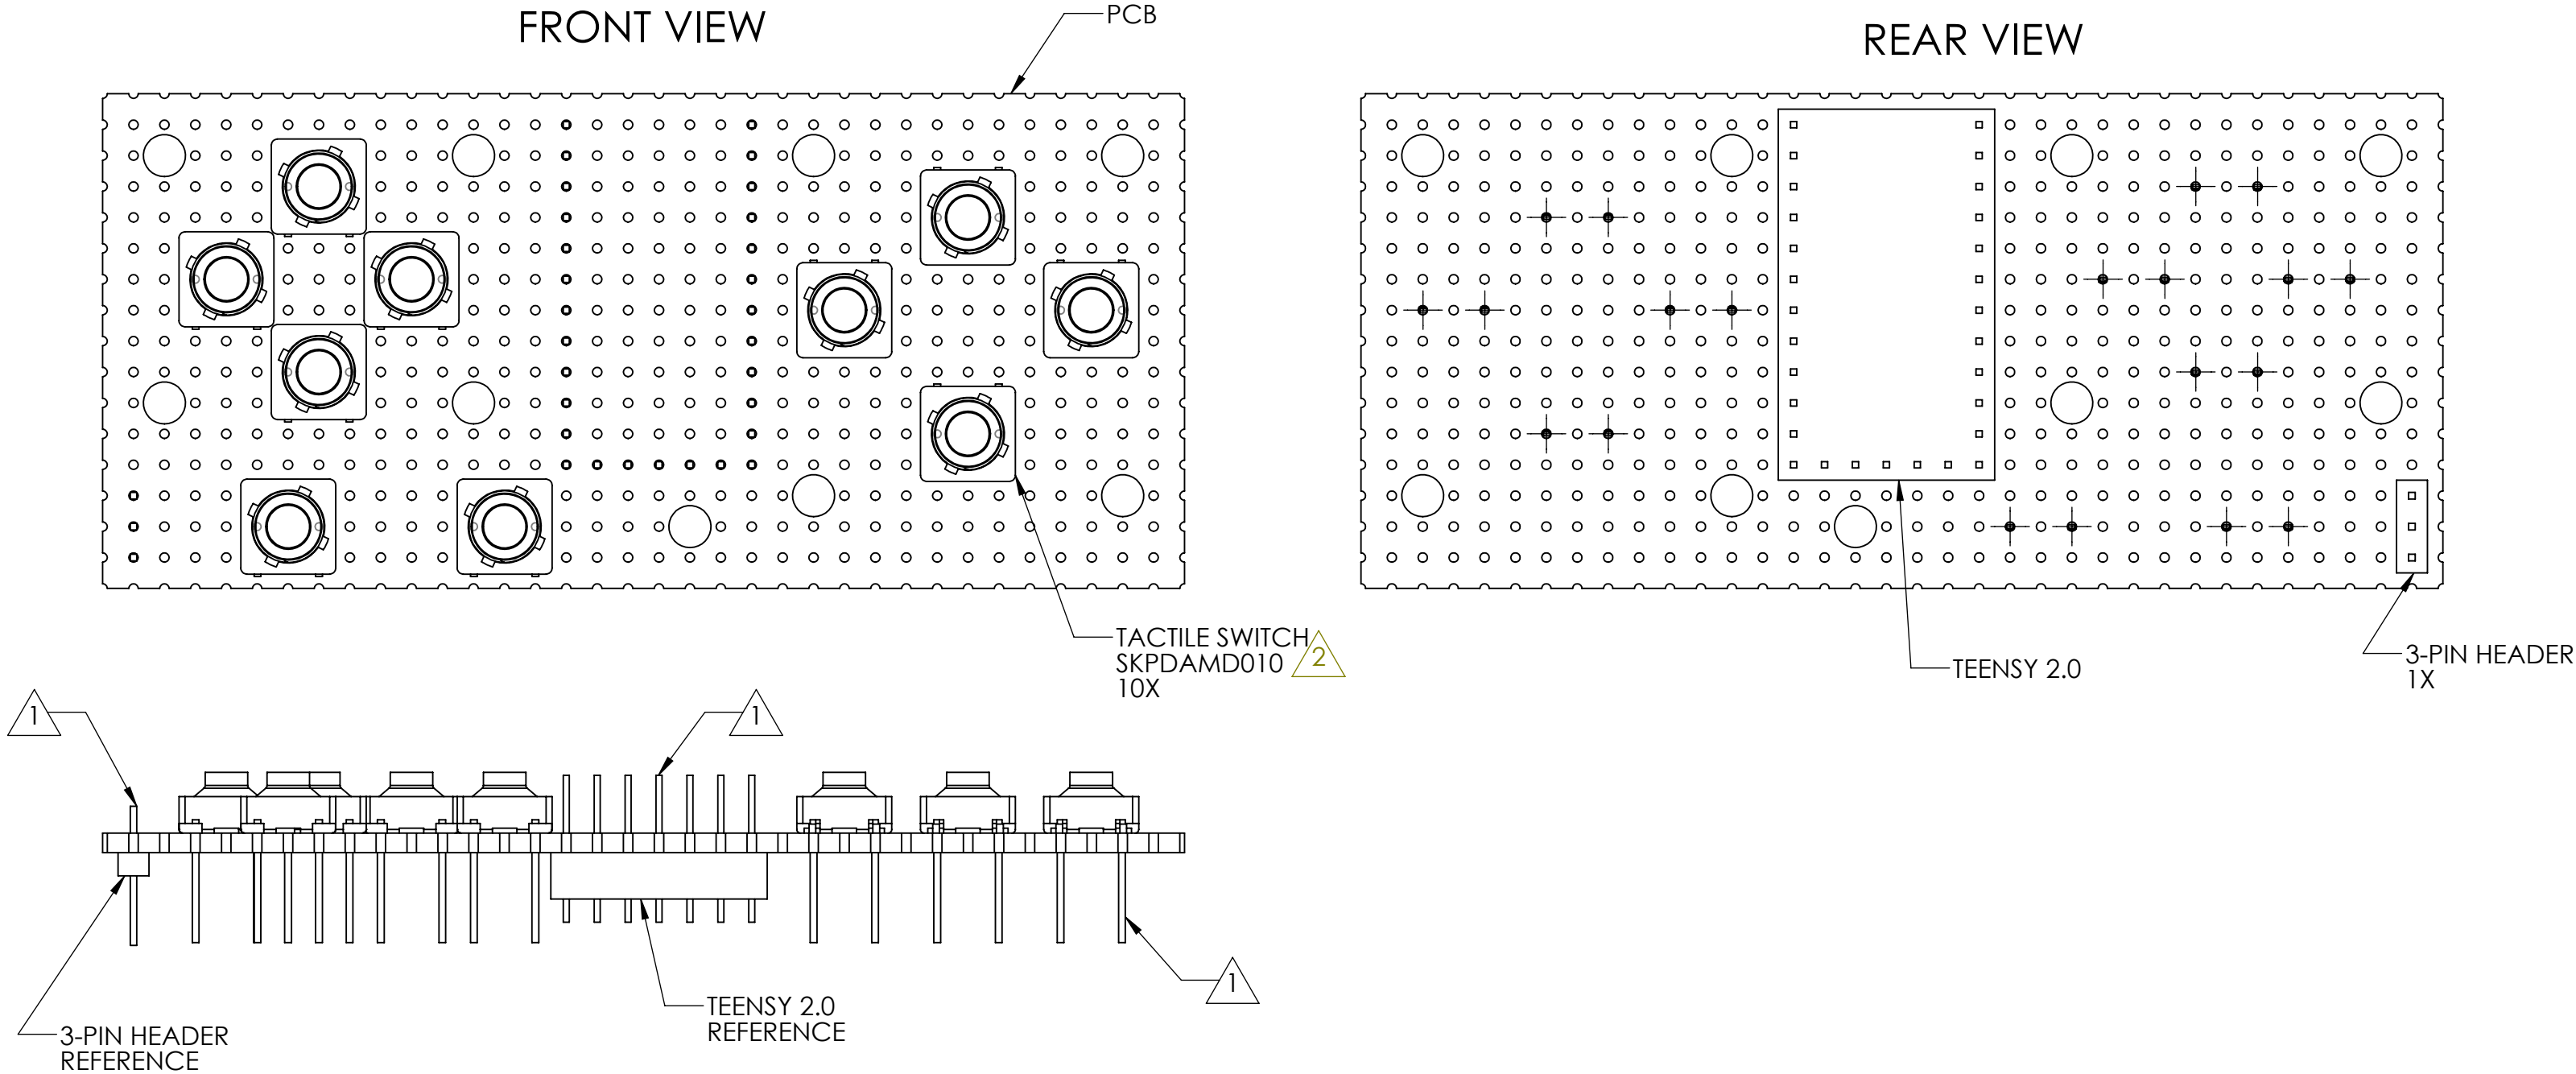

- NOTE:
- 1. TRIM EXCESS FROM COMPONENT PINS AFTER SOLDERING IS COMPLETE.
 - 2. CROSSES SHOWN ON REAR VIEW DESIGNATE HOLES TO USE TO INSTALL SWITCHES.
 - 3. CHECK THE BUILD ALBUM LINKED ON THINGIVERSE FOR DETAILED IMAGES OF ASSEMBLY.